

OPERATING INSTRUCTION (Be sure battery is properly inserted with "+" and "-" terminals)

1. TO SET CLOCK

Slide switch to "CLOCK". Press and hold "HR", "MIN" or "SEC" button to actual time.

2. TO SET TIMER

Slide switch to "TIMER" Press and hold "HR", "MIN" or "SEC" button for timing. Press "START" - To temporarily stop timing cycle. Press "STOP"/to restart Press "START". The time will count up from 0:00:00 to tell you how long since the alarm sounded. To stop count up and/or alarm, Press "STOP".

3. MEMORY

Press and hold "HR", "MIN" or "SEC" button for desired time then press "MEMORY" to enter preset time. ("MEMORY" flag on display on). "Preset time" can be recalled instantly in "Timer" mode by pressing "MEMORY" button and operated by START/STOP button as normal to save time in setting for repeated process with same timing requested. Press "MEMORY" to recall preset time and then press "CLEAR" to cancel preset time.

4. COUNT UP

Slide switch to "COUNT UP" position and press "START" to start counting upward. Press "STOP" to temporarily stop timing/to restart, press "START". Press "CLEAR" to reset digits to 00HR:00MIN:00SEC.

5. 12 HOUR AM/PM FORMAT OR 24 HOUR INTERNATIONAL TIMER USER-SELECTABLE


Slide switch to "CLOCK" position, press and hold "CLEAR" button for 2 sec to change 12 Hour mode to 24 Hour mode or vice versa.

BATTERY: 1 pc 1.5 USA Eveready "AA" operated (included).


BATTERY LIFE: Approximately 3 years.

BATTERY SIZE: "AA" or UM3 (penlight).

BACK

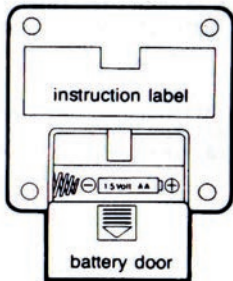

FRONT

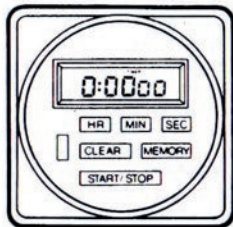

Model 870A