



3M™ 8300 Series Particulate Respirators

Description

The 3M™ 8300 Series Particulate Respirators provide effective respiratory protection for use in industries where workers will be exposed to dust particles and/or non-volatile liquid particles.

- Tested and CE Approved to EN 149:2001+A1:2009
- Robust outer shell improves collapse resistance
- M-Noseclip adjusts easily for fewer pressure points and greater comfort on the nose
- Braided headbands improve comfort on the neck, face and head with a secure feel
- 3M™ Advanced Electret Filter Material gives effective filtration with low breathing resistance for consistent high quality performance
- The super-soft, cushioned inner lining helps workers stay comfortable.
- 3M™ Cool Flow™ exhalation valve offers improved comfort in hot humid environments and/or where work is hard and physical*.
- Coloured headbands for easy identification: yellow for FFP1, blue for FFP2 and red for FFP3

Materials

The following materials are used in the 8300 Series Particulate Respirators:

• Straps	Thermoplastic Elastomer
• Staples	Steel
• Nose Clip	Aluminium
• Filter	Polypropylene
• Valve*	Polypropylene
• Valve diaphragm*	Thermoplastic Elastomer
• Faceseal (8833 only)	PVC

These products do not contain components made from natural rubber latex.

Maximum mass of products:

- Unvalved (8310 & 8320) = 10g
- Valved (8312 & 8322) = 15g
- Valved (8833) = 20g

Standards

These products meet the requirements of the European Standard EN149:2001 + A1:2009, filtering facepiece respirators for use against particles. They should be used to protect the wearer from solid and non-volatile liquid particles only.

Performance tests in this standard include filter penetration; extended exposure (loading) test; flammability; breathing resistance and total inward leakage. Reusable products are also subjected to cleaning, storage and mandatory clogging resistance tests (clogging is optional for non reusable products). A full copy of EN 149:2001+A1:2009 can be purchased from your national standards body.

Designations:

R = Reusable

NR = Non reusable (single shift use only)

D = Meets the clogging resistance requirements

Approvals

These products meet the requirements of the European Community Directive 89/686/EEC (Personal Protective Equipment Directive) and are thus CE marked.

Certification under Article 10, EC Type-Examination, has been issued for these products by INSPEC International Limited, 56 Leslie Hough Way, Salford, Greater Manchester M6 6AJ, UK (Notified Body number 0194).

Certification under Article 11, EC quality control, has been issued by BSI Product Services (Notified Body number 0086).

Applications

These respirators are intended for use in concentrations of solid and non-volatile liquid particles up to the following limits:

Model	EN 149+A1 Classification	Exhalation Valve	Maximum Use Concentration
8310	FFP1 NR D	Unvalved	4 x WEL**
8312	FFP1 NR D	Valved	4 x WEL
8320	FFP2 NR D	Unvalved	10 x WEL
8322	FFP2 NR D	Valved	10 x WEL
8833	FFP3 R D	Valved	20 x WEL

** Workplace Exposure Limit

Respiratory protection is only effective if it is correctly selected, fitted and worn throughout the time when the wearer is exposed to hazards.

* 8312, 8322 and 8833 models only

Storage and Transportation

The 3M™ 8300 Series Particulate Respirators have a shelf life of 5 years. End of shelf life is marked on the product packaging. Before initial use, always check that the product is within the stated shelf life (use by date). Product should be stored in clean, dry conditions within the temperature range: – 20°C to + 25°C with a maximum relative humidity of <80%. When storing or transporting this product use original packaging provided.

Disposal


Contaminated products should be disposed of in accordance with national regulations.

Cleaning

8833 only: If the respirator is to be used for more than one shift the face seal/gasket must be cleaned at the end of each shift using the 3M™ 105 Face Seal Cleaner. DO NOT immerse product in water. Store cleaned respirator in clean, airtight container.

Fitting Instructions

1. Cup respirator in one hand with noseclip at fingertips, allow headbands to hang freely below hand.
2. Hold respirator under chin, with nosepiece up.
3. Locate the upper strap across the crown of the head and the lower strap below the ears.
4. Straps must not be twisted.

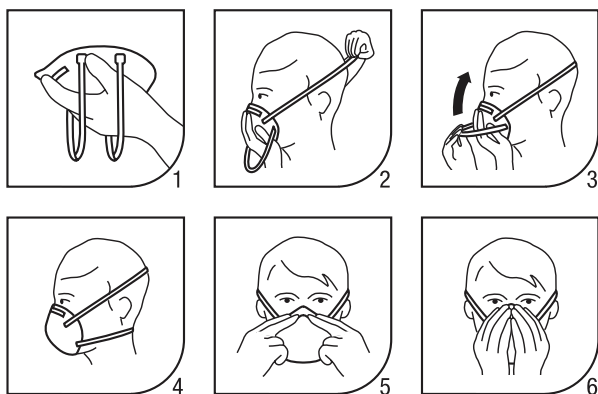

3M Health & Safety Helpline

0870 60 800 60 (UK) 1 800 320 500 (Ireland)



3M Occupational Health & Environmental Safety Group

3M United Kingdom plc

3M Centre
Cain Road, Bracknell
Berkshire RG12 8HT
Tel: 0870 60 800 60
www.3M.co.uk/ohes

3M Ireland Limited

The Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

Please recycle.
© 3M 2010. All rights reserved.

5. Using both hands, mould noseclip to the shape of the nose to ensure a close fit and good seal. Pinching the noseclip using only one hand may result in less effective respirator performance.
6. The seal of the respirator to the face should be fit-checked before entering the contaminated area.

Fit Check

1. Cover the front of the respirator with both hands being careful not to disturb its fit.
2. (a) UNVALVED respirator - EXHALE sharply;
(b) VALVED respirator - INHALE sharply.
3. If air leaks around the nose, re-adjust the noseclip to eliminate leakage. Repeat the above fit check.
4. If air leaks at the respirator edges, work the straps back along the sides of the head to eliminate leakage. Repeat the above fit check.

If you **CANNOT** achieve a proper fit **DO NOT** enter the hazardous area. See your supervisor.

Users should be fit tested in accordance with national requirements.

For information regarding fit testing procedures, please contact 3M.

⚠ Warnings and Use Limitations

- Always be sure that the complete product is:
 - Suitable for the application;
 - Fitted correctly;
 - Worn during all periods of exposure;
 - Replaced when necessary.
 - Proper selection, training, use and appropriate maintenance are essential in order for the product to help protect the wearer from certain airborne contaminants.
 - Failure to follow all instructions on the use of these respiratory protection products and/or failure to properly wear the complete product during all periods of exposure may adversely affect the wearer's health, lead to severe or life threatening illness or permanent disability.
 - For suitability and proper use follow local regulations, refer to all information supplied or contact a safety professional/3M representative.
 - Before use, the wearer must be trained in use of the complete product in accordance with applicable Health and Safety standards/guidance.
 - These products do not protect against gases/vapours.
 - Do not use in atmospheres containing less than 19.5% oxygen. (3M definition. Individual countries may apply their own limits on oxygen deficiency. Seek advice if in doubt).
 - Do not use for respiratory protection against atmospheric contaminants/concentrations which are unknown or immediately dangerous to life and health (IDLH).
- ⚠ **Do not use with beards or other facial hair that may inhibit contact between the face and the product thus preventing a good seal.**
- Leave the contaminated area immediately if:
 - a) Breathing becomes difficult.
 - b) Dizziness or other distress occurs.
 - Discard and replace the respirator if it becomes damaged, breathing resistance becomes excessive or at the end of the shift. *
 - Never alter, modify or repair this device.
 - In case of intended use in explosive atmospheres, contact 3M.

* The 8833 can be used for more than one shift. See cleaning instructions.